


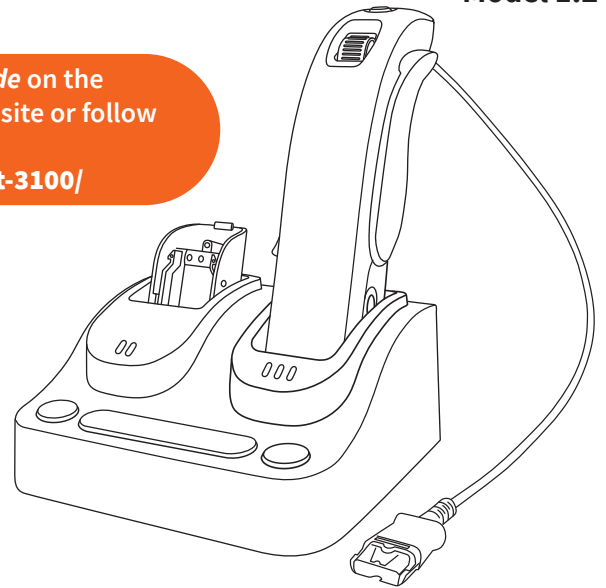


Model 1.2




You can find the full *JPL Scout 3100 User Guide* on the JPL Scout 3100 product page on the JPL website or follow the link below / scan QR code.
<https://www.jpltele.com/product/jpl-scout-3100/>




Spare Battery - Charge Status

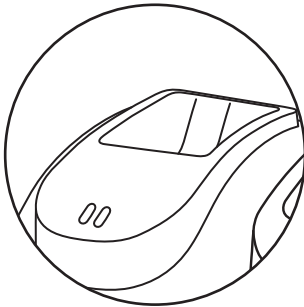

LEDs "OFF"
Spare battery cradle empty.
LEDs are "OFF"

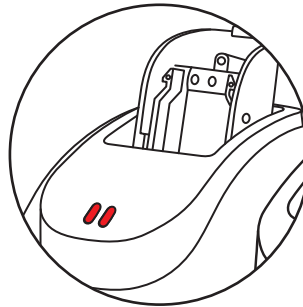


LEDs "ON"
Spare battery is charging.
LEDs are "Red"

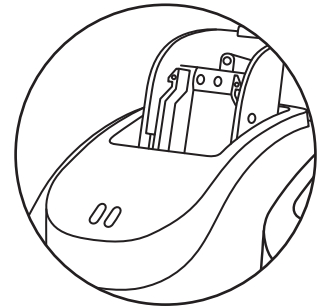


LEDs "OFF"
Spare battery fully charged.
LEDs are "OFF"


Handheld Trigger - Battery Charge Level LED Indication

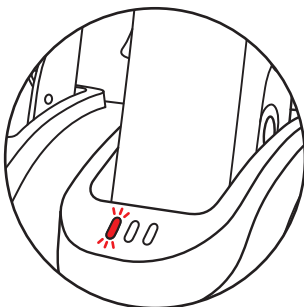

"Red" = Low battery.
"Red" LED flashing = Low battery charging.

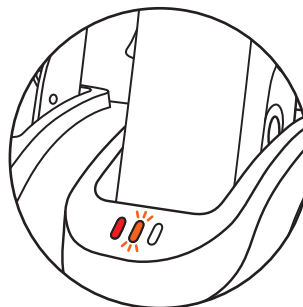

"Red" & "Orange" = Medium charged.
"Red" LED is on, and "Orange" LED flashing = Battery charging.

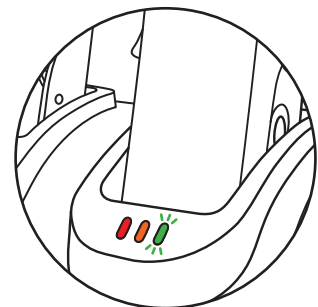

"Red", "Orange" & "Green" = 80%+ charged.
"Red", "Orange" with "Green" LED flashing = Battery charging.

Your handheld is charging when you see the battery LED indicator flashing.

For all handheld trigger battery LED indications, the LED flashes twice when the handheld trigger is inserted into the docking cradle to confirm it is charging.